



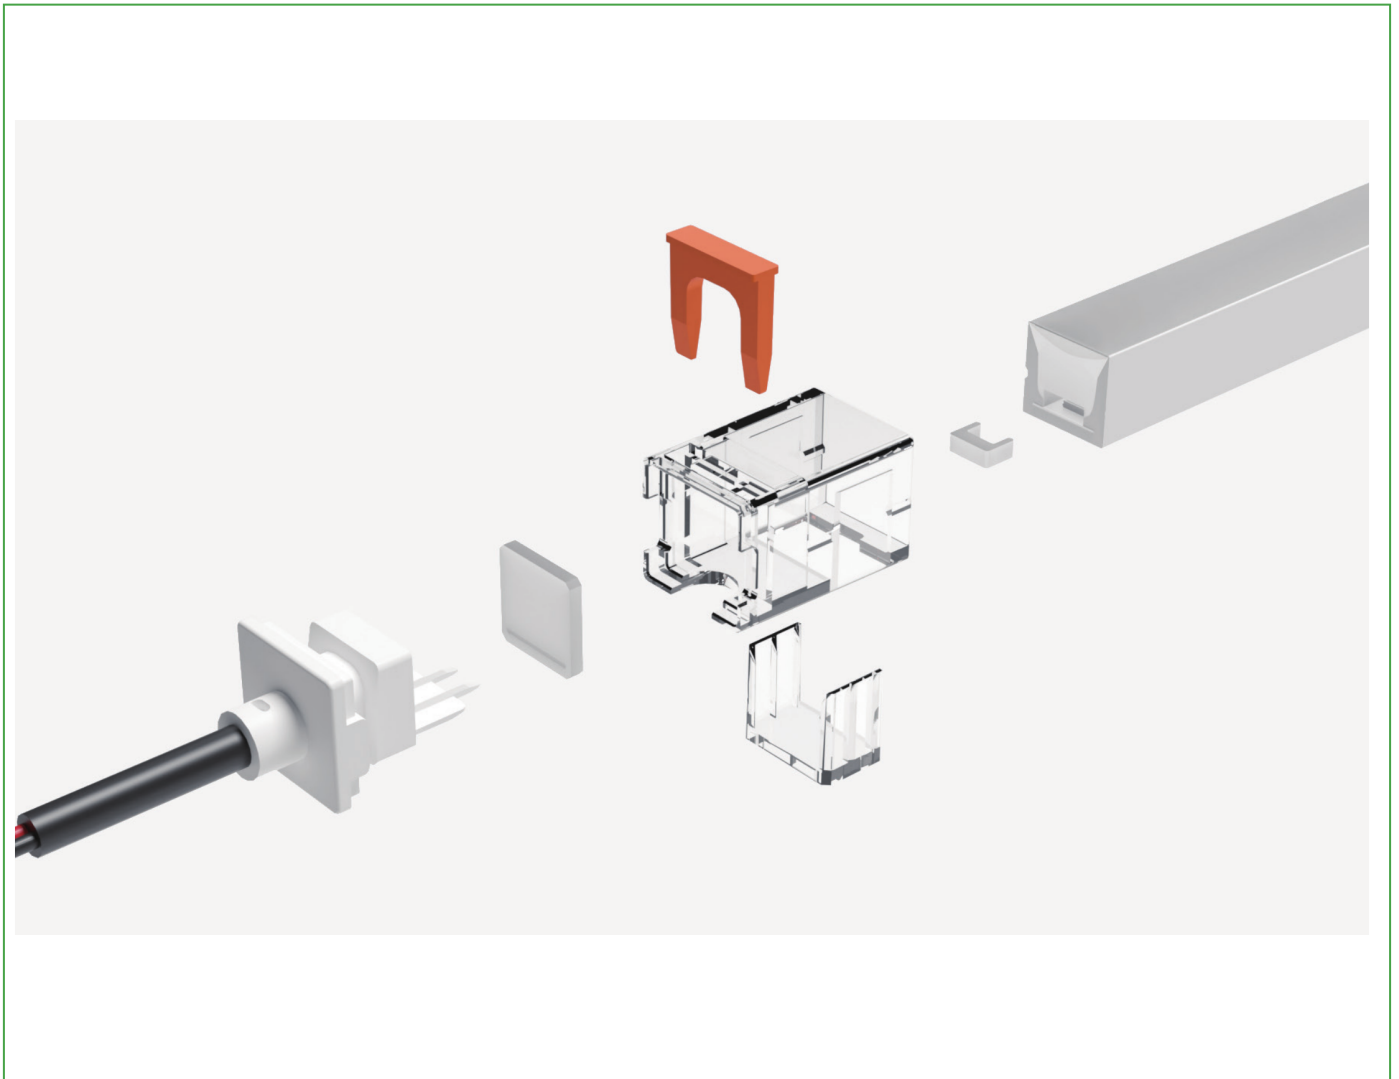


Solder Free End Cap

Information and Installation Guide


Front Cable Entry

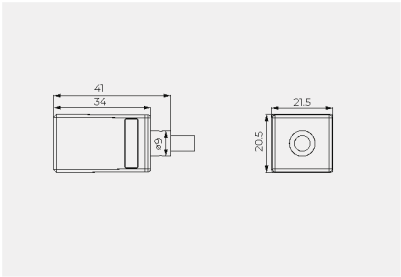


ELITE 1617 TV-01

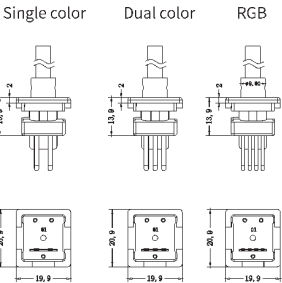


ELITE 1617 TV-02

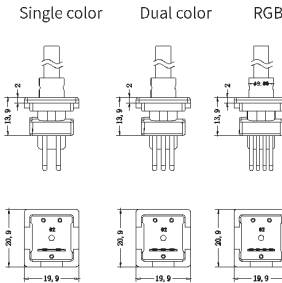


Side Cable Entry

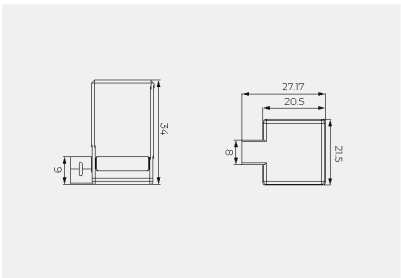


ELITE 1617 TV-01

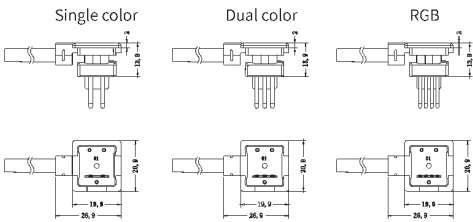


ELITE 1617 TV-02

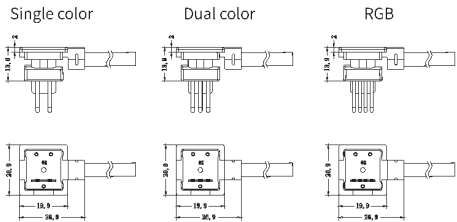


Bottom Cable Entry

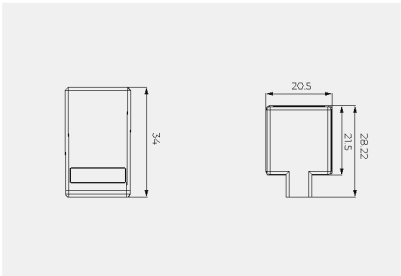








ELITE 1617 TV-01

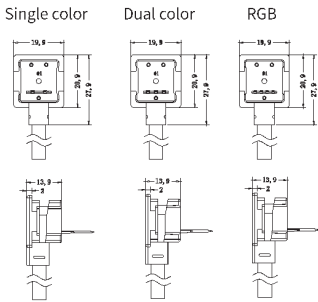

ELITE 1617 TV-02

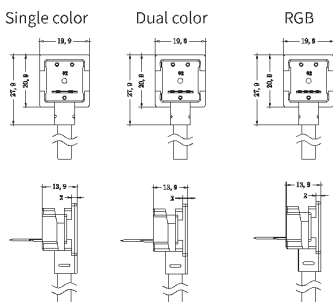


Solder Free End Cap

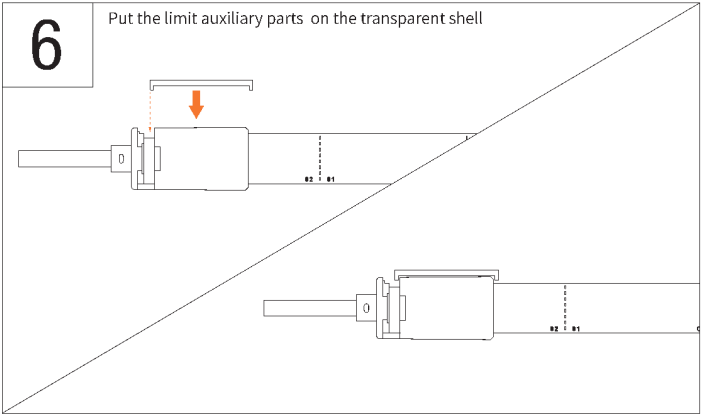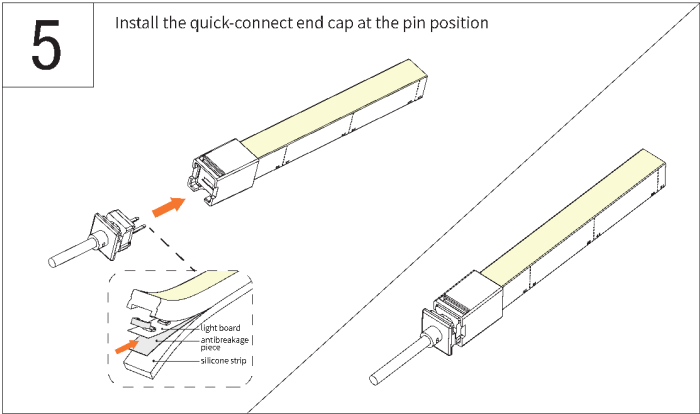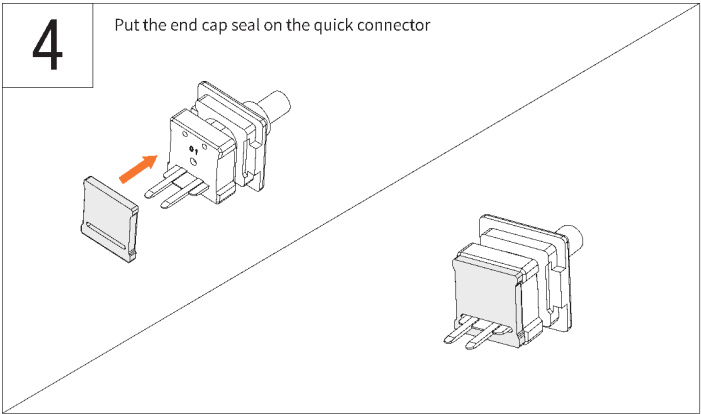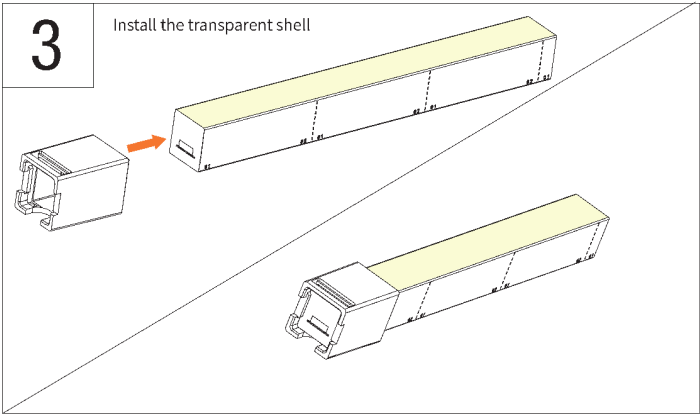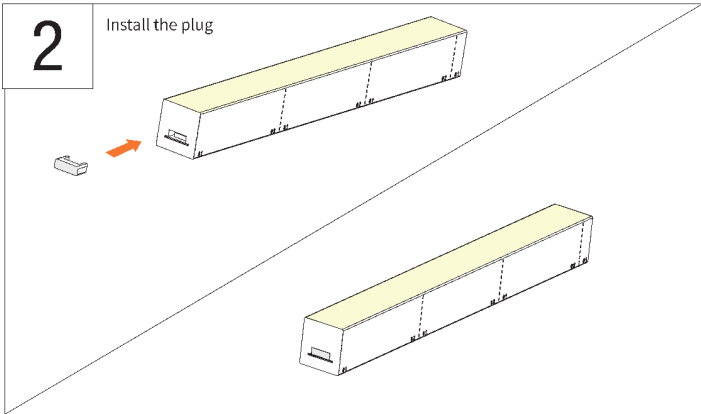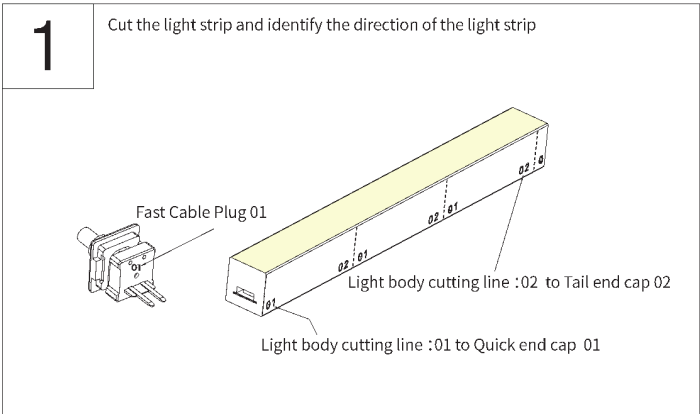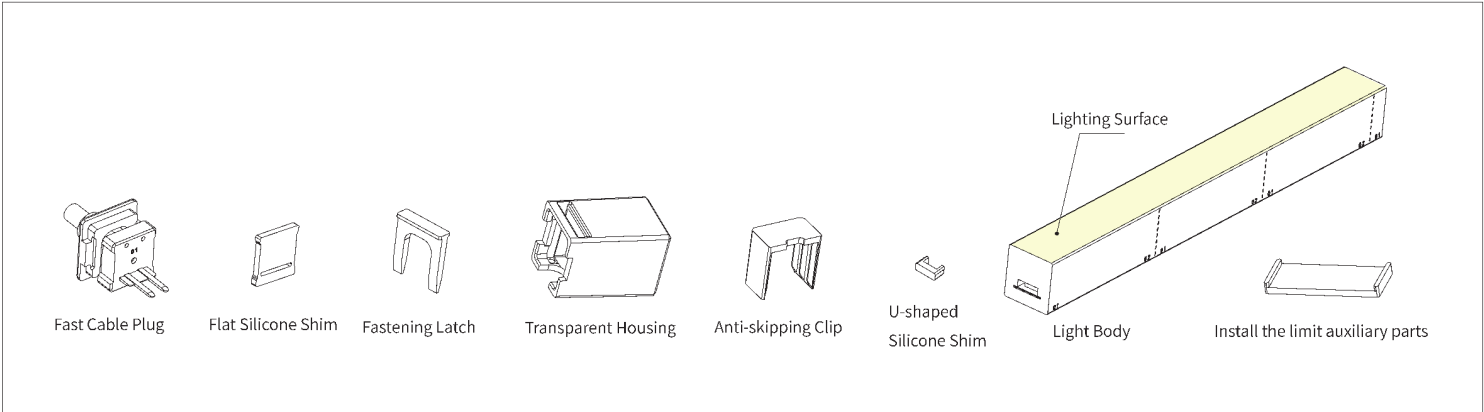


7

push the light bar and the plug tightly to clamp the limit auxiliary parts

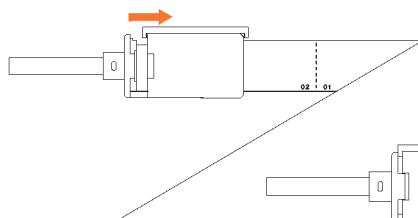


8

Turn the product over and install the anti-slip clip. Press and push the anti-slip clip to make it consistent with the outer shell surface.

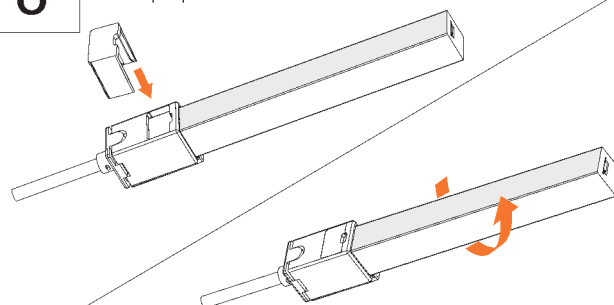


9








Remove the product the limit auxiliary parts, and leave the spacing of the original the limit auxiliary parts between the quick connectors

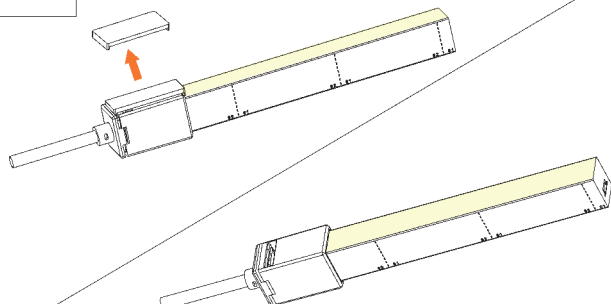

10


Install the hardware fixing clip and push the hardware fixing clip flat with the shell surface

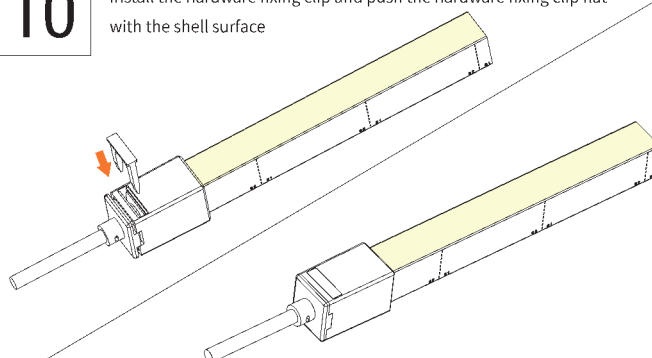

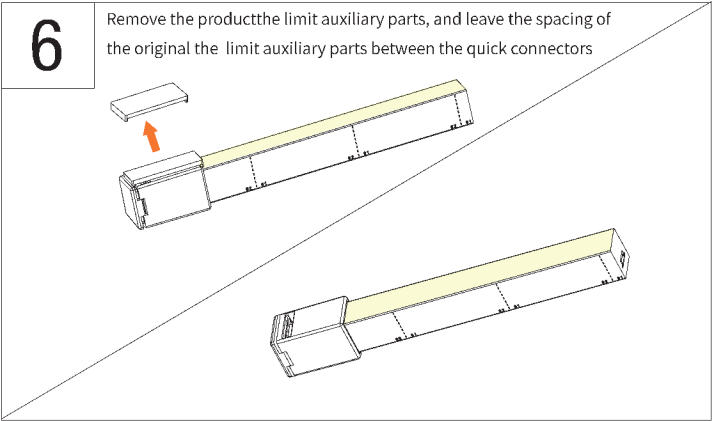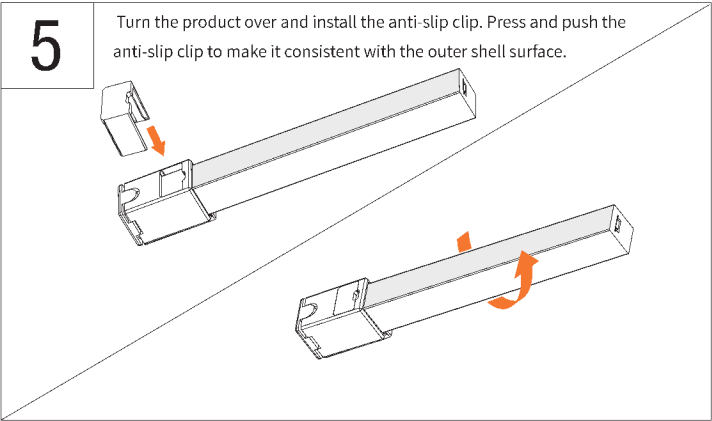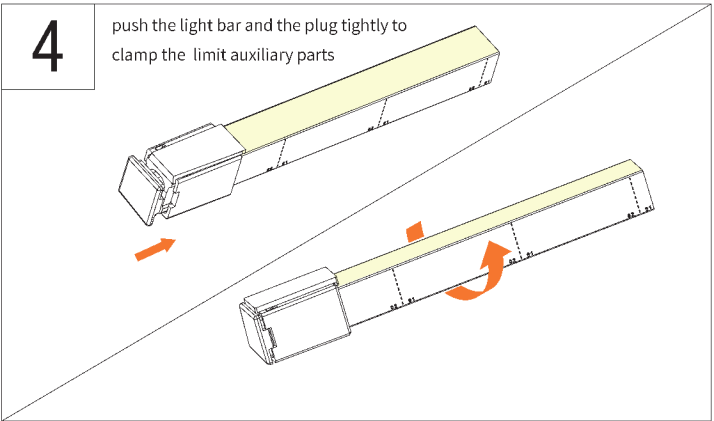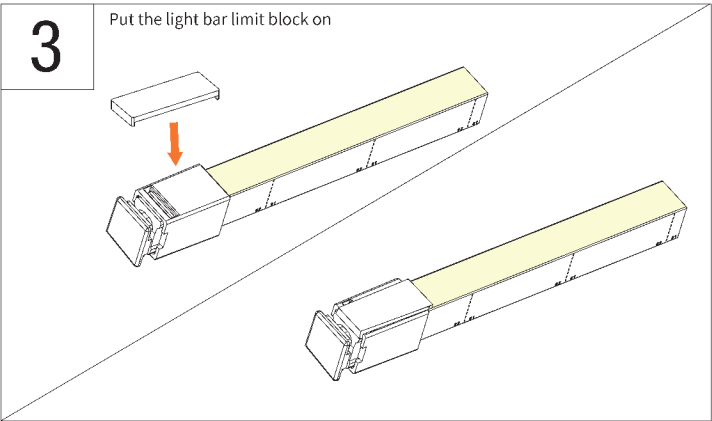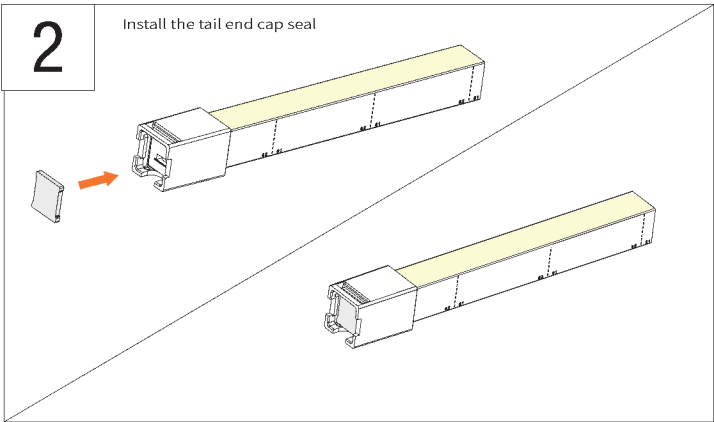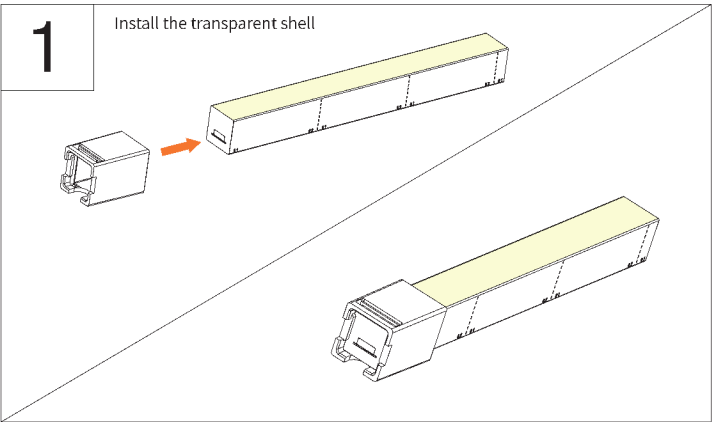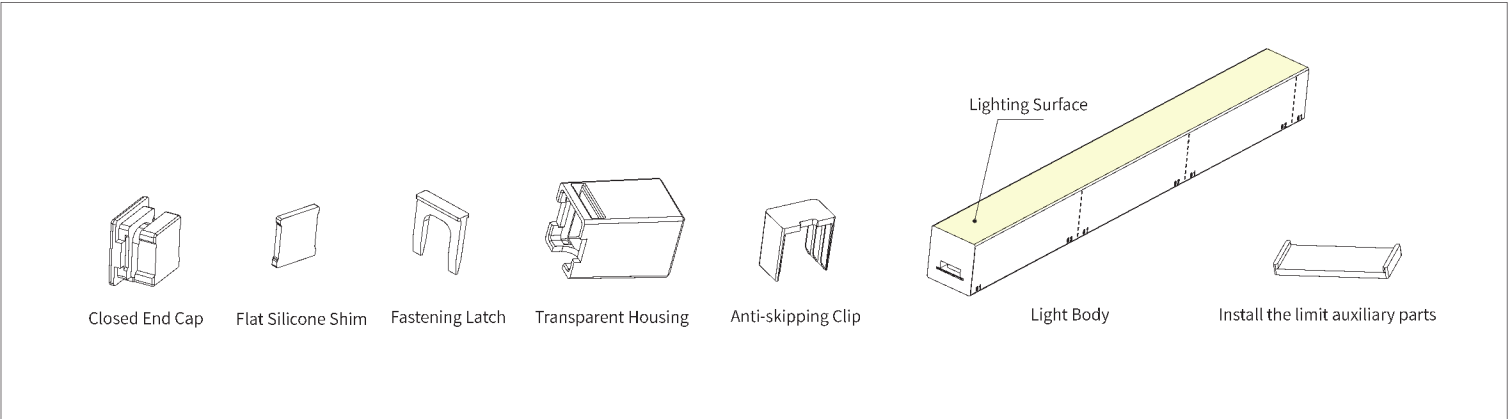


7


Install the hardware fixing clip and push the hardware fixing clip flat with the shell surface

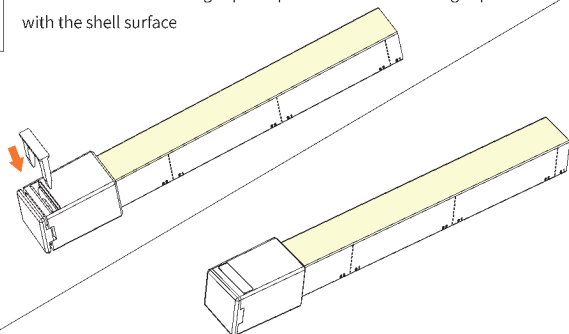


Front Cable Entry

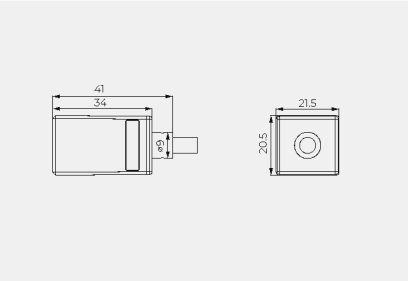


ELITE 1617 SV-01

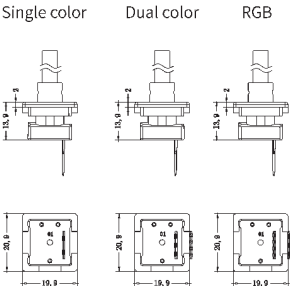


ELITE 1617 SV-02

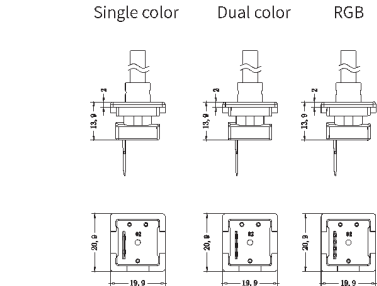


Side Cable Entry

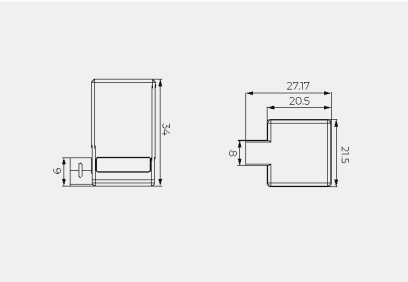


ELITE 1617 SV-01

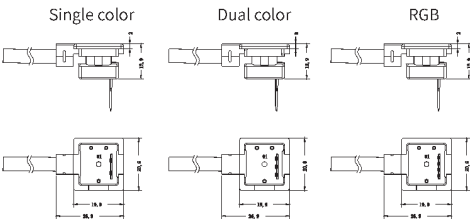


ELITE 1617 SV-02

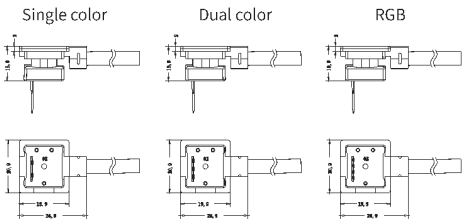


Bottom Cable Entry

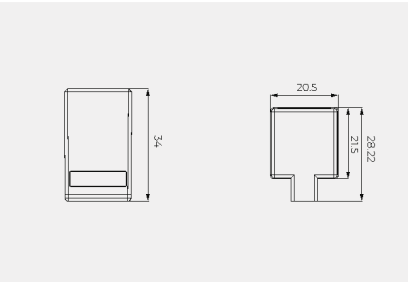


ELITE 1617 SV-01

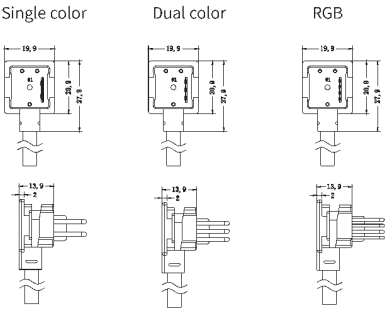


ELITE 1617 SV-02

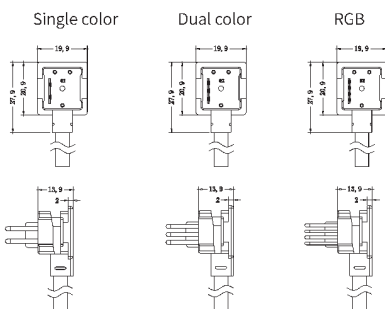


Front Cable Entry

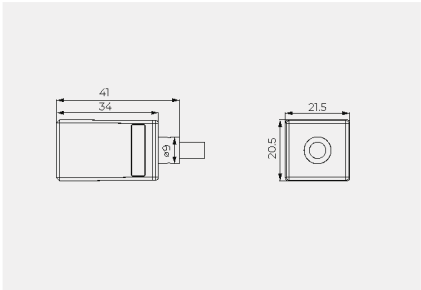


ELITE 1617 SV-01

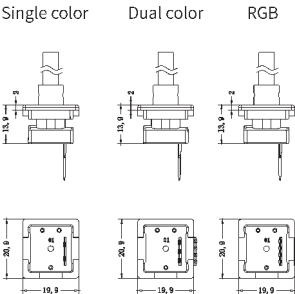


ELITE 1617 SV-02

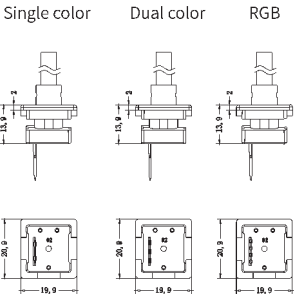


Side Cable Entry

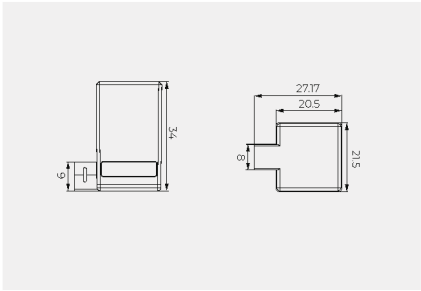


ELITE 1617 SV-01

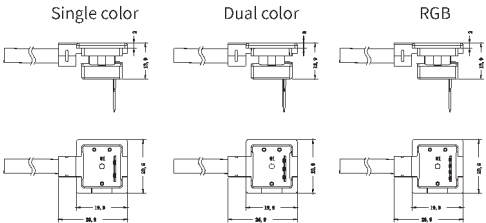


ELITE 1617 SV-02

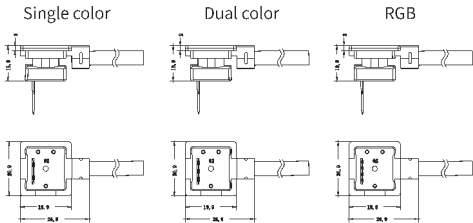


Bottom Cable Entry

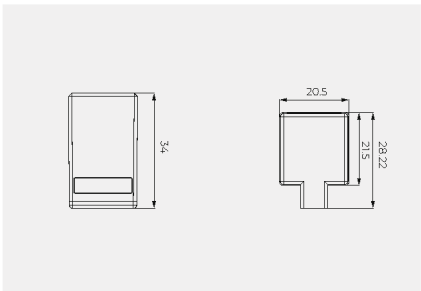

ELITE 1617 SV-01

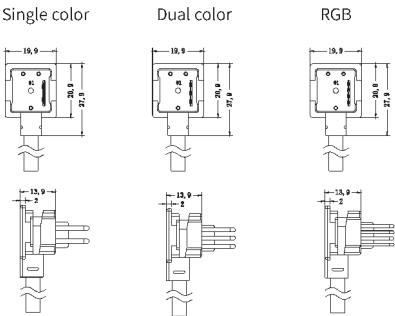


ELITE 1617 SV-02

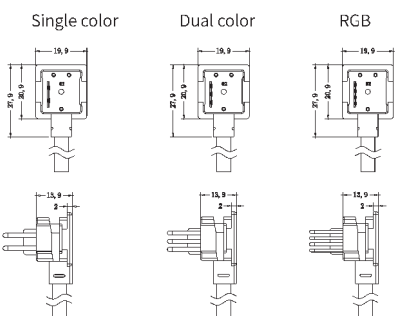

Solder Free End Cap


7

push the light bar and the plug tightly to clamp the limit auxiliary parts

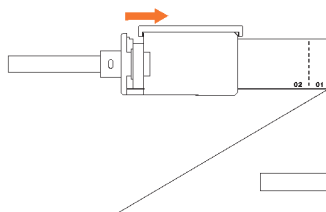


8

Turn the product over and install the anti-slip clip. Press and push the anti-slip clip to make it consistent with the outer shell surface.

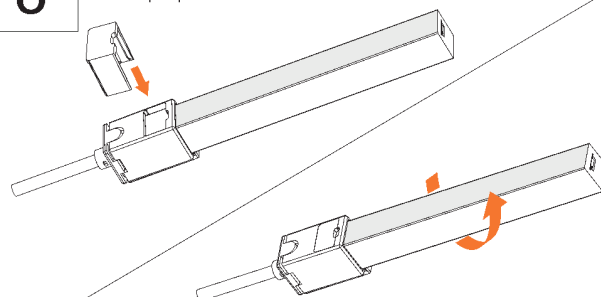


9








Remove the product the limit auxiliary parts, and leave the spacing of the original the limit auxiliary parts between the quick connectors

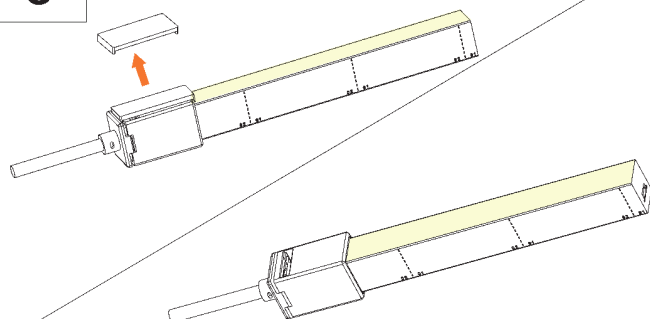

10

Install the hardware fixing clip and push the hardware fixing clip flat with the shell surface

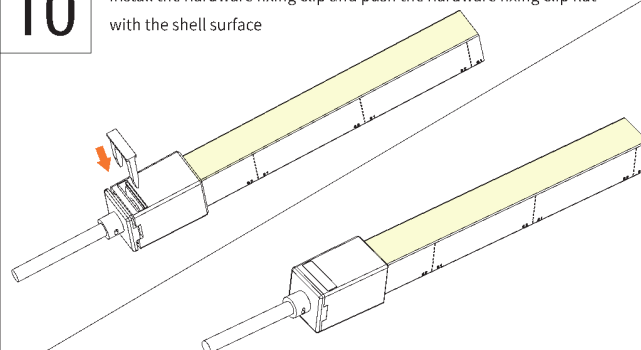

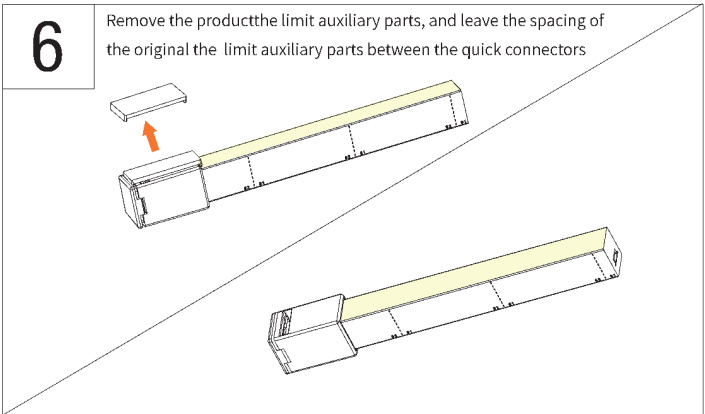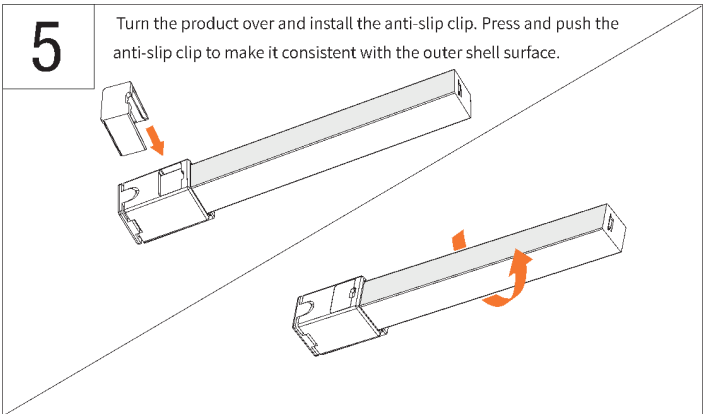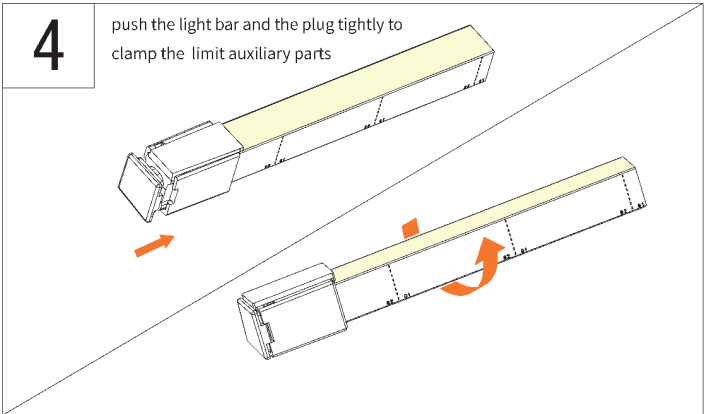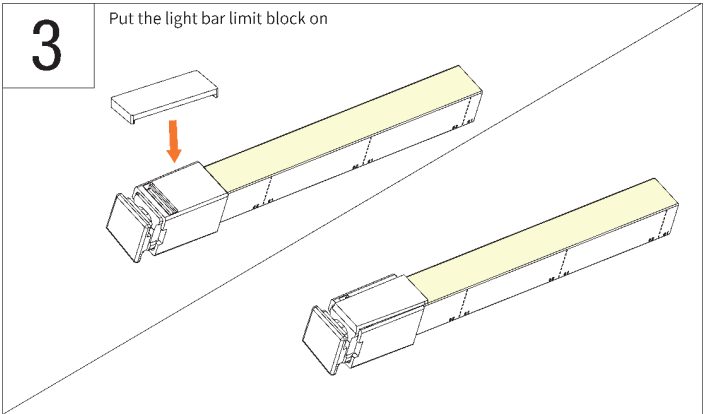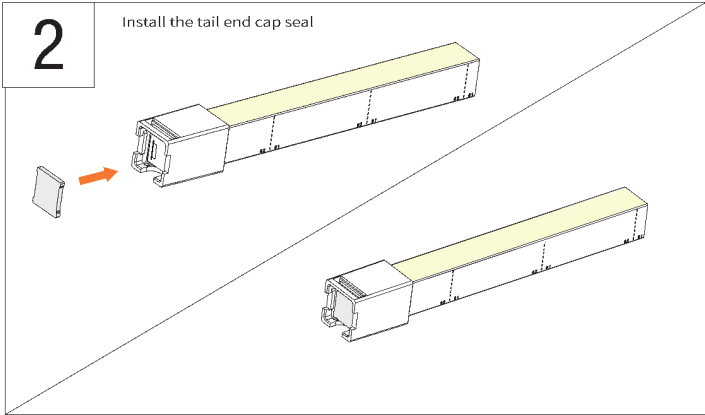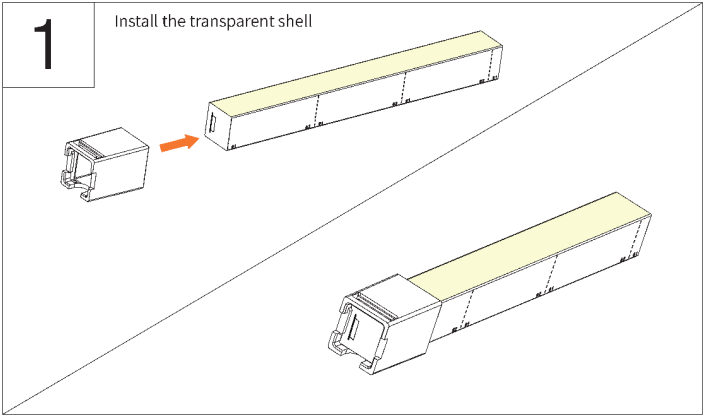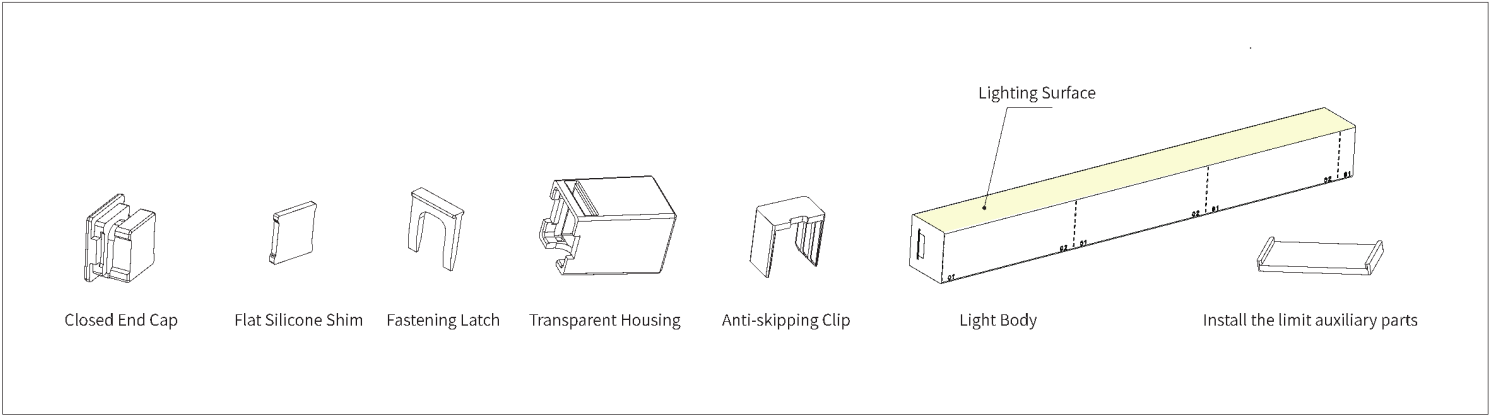

7

Install the hardware fixing clip and push the hardware fixing clip flat with the shell surface

